

## MANUAL DATA UPLOAD USING BASE STATION

What you will need:

- SCRAM<sub>x</sub> Bracelet assigned to client
- SCRAM<sub>x</sub> Base Station assigned to client (including power cord and phone cable)

### 1. Plug in the SCRAM<sub>x</sub> Base Station

- a. Plug in AC power and an analog phone line.

#### At this time:

- If not already done, the client is prompted to plug in the phone line.
- On the base station, the **red** border on the button starts blinking.
- Base station display:
  - Line 1 – SCRAM SYSTEM
  - Line 2 – Steps through DIALING → ONLINE → MONITORING

#### When complete:

- The **red** border on the button stops blinking.

### 2. Wake Up SCRAM<sub>x</sub> Bracelet

To wake up the bracelet:

- a. Momentarily place the magnet on the top right side of the bracelet.



Placing Magnet on SCRAM<sub>x</sub> Bracelet

#### At this time:

- On the base station, the **red** border on the button turns on.
- In approximately 15 seconds, the bracelet pump will run—indicated by a buzz.
- Base station display:
  - Line 1 – SCRAM SYSTEM
  - Line 2 – READING BRACELET

#### When complete:

- Base station display:
  - Line 1 – SCRAM SYSTEM
  - Line 2 – MONITORING
- The **red** border on the button turns off.

### 3. Unplug and Re-Plug AC Power to the SCRAM<sub>x</sub> Base Station

- a. Unplug AC power from the base station and wait 10 seconds.
- b. Re-plug in AC power to the base station.

#### At this time:

- On the base station, the **red** border on the button starts blinking.
- Base station display:
  - Line 1 – SCRAM SYSTEM
  - Line 2 – Steps through DIALING → ONLINE → MONITORING

#### When complete:

- The **red** border on the button stops blinking.
- Base station display:
  - Line 1 – SCRAM SYSTEM
  - Line 2 – MONITORING